

# USER MANUAL

---

## 150M HDMI 1.3 IP EXTENDER

**Enjoy the vivid world**

## Introduction

150M HDMI IP Extender is based on TCP/IP standard. It transmits your HD display with the high resolution up to 150 meters away from your DVD or computer source by using one CAT5e/6 cable.

At the same time, it's convenient to transmit HDMI audio and video source by point-to-point mode, one point-to-multi point mode and cascade connection mode .



## Features

- \* H.264 code transmission, transmission rate 16Mbps;
- \* Support point-to-point mode, one point-to-multi point mode and cascade connection mode;
- \* 802.3 Ethernet standard;
- \* Support IR remote control;
- \* The transmitter support HDMI loop-out function;
- \* The design of pure hardware, plug and play, no need for additional software.


## Specifications

HDTV Resolutions.....	480p,720p,1080p
Audio.....	Sample rate:32kHz,44.1kHz and 48kHz code
IR remote control.....	38 KHz (NEC)
Power adapter.....	DC:5V/1A

The Max Power consumption.....HDMI sender:2.5W HDMI receiver:2W  
 Size(L-W-H).....93\*79\*27mm  
 Weight.....228g x 2  
 Operating Temperature/Humidity.....0 C -45 C /10%-80%RH(no condensation)  
 Storage Temperature/Humidity.....-10 C -70 C /5%-90%RH(no condensation)


## Physical interface diagram

### HDMI Transmitter

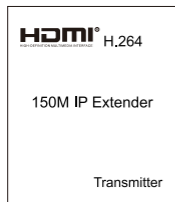

Port	Description
DC/5V	5V power supply for the Transmitter
Reset	Press the key,the device will re-start
IR-TX	Connect IR transmitter
HDMI - IN	HDMI input ,connect HDMI signal source
HDMI - OUT	HDMI output, connect HDMI display device
Ethernet	Network interface by cat5e/6


### HDMI Receiver:

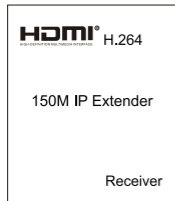


Port	Description
DC/5V	5V power supply for the receiver
Reset	Press the key,the device will re-start
IR-RX	Connect IR receiver
HDMI -OUT	HDMI output, connect HDMI signal device
Ethernet	Network interface by cat5e/6

# Application diagrams

## Application 1:

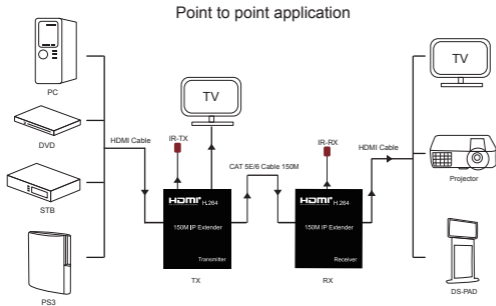

## Application 2:

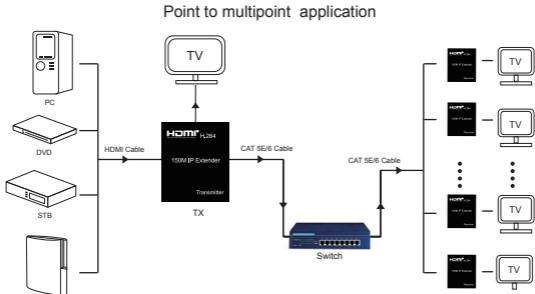

## Application diagrams

150M HDMI extender over IP is used in audio-visual conference, command and control center, ticketing platform, home theater, multi-media teaching, conference system and so on.



audio-visual conference



command and control center



home theater

## Connection and operation

- 1) Connect the HDMI source (such as DVD, PS3, STB ) to the “HDMI IN” of transmitter by HDMI cable.
- 2) Connect the “HDMI out” of Receiver to HDTV display by HDMI cable.
- 3 )Connect the Transmitter and Receiver with one cat5e/6 cable (recommend).the furthest distance is 150M.
- 4) Connect the “IR receiver “into “IR-RX” port on receiver, and “IR transmitter ” into the “IR-TX” on transmitter, and make sure the IR transmitter aim at IR port of the source
- 5) Connect two pieces of 5V power supply to the transmitter and receiver, and power on the HDTV display and HDMI source.

## The Package contents :

- |                        |       |
|------------------------|-------|
| 1. Transmitter         | 1PCS  |
| 2. Receiver            | 1PCS  |
| 3. 5V/1A Power adapter | 2PCS  |
| 4. IR cable            | 1Pair |
| 5. User's Manual       | 1PCS  |

